


# multi purpose trims

1. Remove protective tape A. before installation.
2. Bend once at appropriate flexible joint for required finish (repeated bending will result in cracking of trim).
3. In shower or wet areas additional silicon should be applied to multi purpose trim.

**Colour matched for the following ranges:**

Marmo, Carrara, Craquele and Shining White

*available in high gloss white for all other applications.*

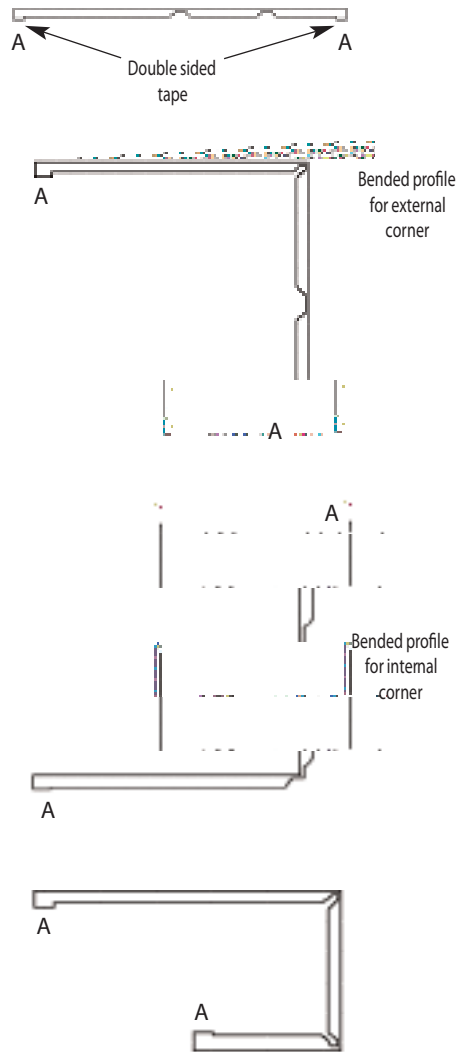

Multi purpose trim



External corner



Internal corner




Perimeter trim

## colour inserts

Suitable for use with flush fitting panels with a product code starting with 65..

*Plastivan do not advise the use of these inserts in a shower area.*

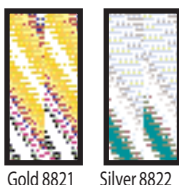

Gold 8821 Silver 8822

